


## PN#R/M20025 Can-Am Defender Speaker Support

### Parts List: Rear

- A: (2) Speaker Supports
- B: (2) 1.0" Spacers/2.0" Screws
- C: (2) 1.0" Spacers/2.0" Screws
- D: (2) 1.5" Spacers/2.5" Screws
- E: (2) 1.0" Spacers/2.0" Screws

### Parts List: Middle

- A: (2) Speaker Supports
- B: (2) 1.0" Spacers/2.0" Screws
- C: (2) 1.0" Spacers/2.0" Screws
- D: (2) 1.5" Spacers/2.5" Screws
- E: (2) .63" Spacers/2.0" Screws

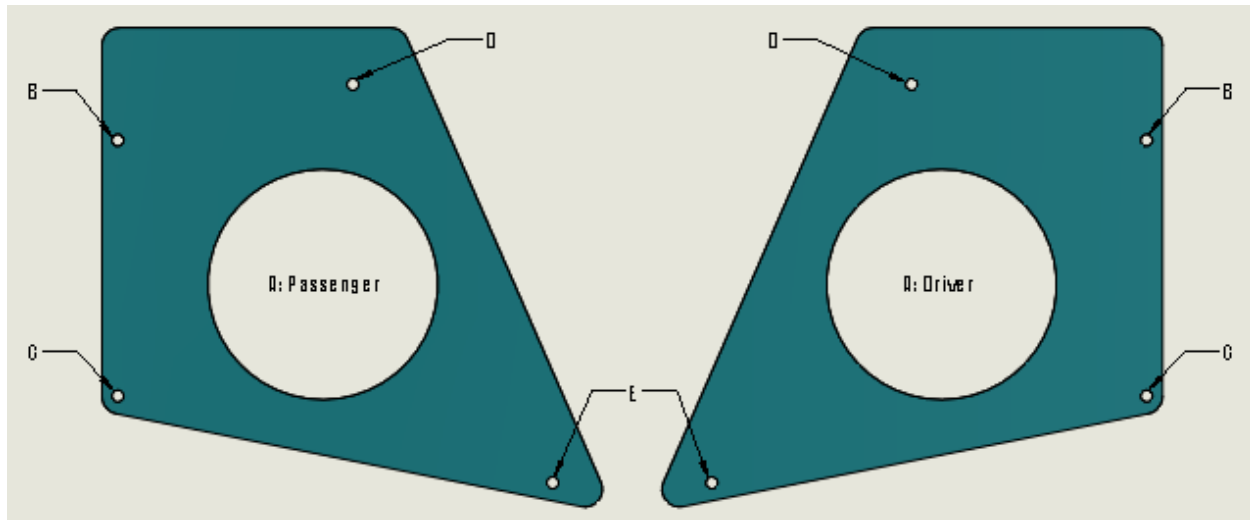

### Rear Installation:

1. Remove Headliner. If no Headliner is present skip to step 2.
2. Install Supports into (8) existing Roof Bosses per above.
3. Reinstall Headliner. If no Headliner skip to step 5.
4. With a Razor knife, cut Headliner using the speaker supports as a guide.
5. Install Speaker and mark/pre-drill speaker mounting holes for self-tapping fasteners in desired location. (Most marine audio kits come with a drill bit and fasteners)
6. Connect speaker wires, reinstall speaker/fasteners, and enjoy.

### Middle Installation:

1. Remove Headliner. If no Headliner is present skip to step 2.
2. Remove OEM Roof Screws and Washer Plates at both lower locations (C & E)
3. Install Supports into (8) existing Roof Bosses per above, you will re-install OEM washer plates at lower locations C & E. The C-Werks Spacer will go between the washer plate and the Speaker support in these locations.
4. Reinstall Headliner. If no Headliner skip to step 5.
5. With a Razor knife, cut Headliner using the speaker supports as a guide.
6. Install Speaker and mark/pre-drill speaker mounting holes for self-tapping fasteners in desired location. (Most marine audio kits come with a drill bit and fasteners)
7. Connect speaker wires, reinstall speaker/fasteners, and enjoy.

**CAUTION: Must pre-drill and use self-tapping fasteners to mount speakers into supports. Not doing so will risk damage to speaker supports.**