




Product: Defender Snorkel Bracket


Disclaimer: N/A

Instructions:

- Note: Installation will be easier with rear window removed.
- If you are installing the OEM snorkels install up until this point in the instructions before the snorkel risers are installed. Do not install rivets that hold tubes in place.
 - If you already have OEM snorkels installed remove the top snorkel risers and drill out the rivets that attach them to the machine.

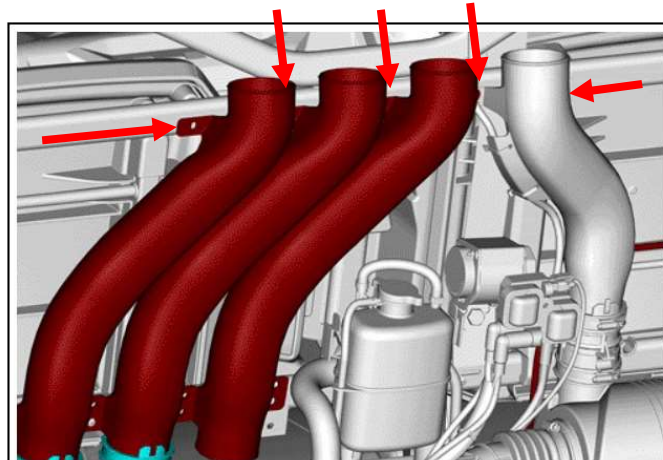

- Place the MCE bracket behind the snorkels as it would be mounted with the studs through the snorkels and snug up the supplied nuts for the studs.

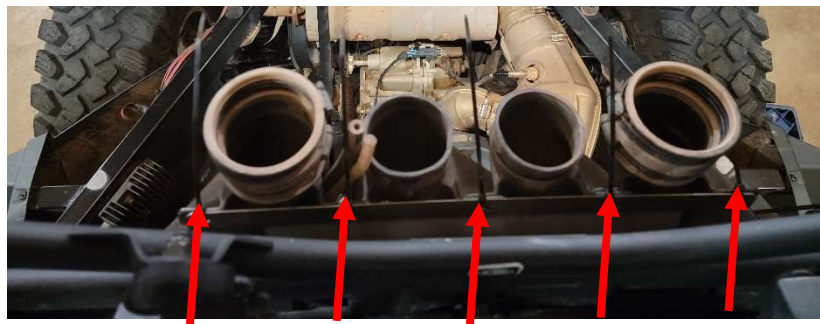

Thank you for your purchase.

For a list of more products we offer please visit marqcadeng.com or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.

- Push the bottom side of the bracket up against the rear plastic fire wall of the machine and mark the far left hole through the snorkel tubes and the 2 right side holes.
- Unbolt the bracket from snorkels done in previous step and pull back the snorkels, line the bracket back up with the pre marked holes and mark the final hole that is behind snorkel when installed.
- Once marked drill a 1/4" hole through each mark. BE CAREFULL when drilling not to drill to far into the carpet insert on the other side of the plastic fire wall.
- Remove the seat back from the passenger side to help allow access to next steps.
- Using the supplied bolts nuts and washers install the bracket to the plastic fire wall. To access behind the carpet interior panel remove top fasteners and carefully pull it back out of the way. You will not have to remove it fully, just pull the top out to see down in. Picture below shows rough hole locations from the inside.



- Run the supplied self-adhesive foam strip along the backside of the bracket for extra protection between the snorkels and the window.



- Once completed either continue to follow can am instructions for snorkel installation and/or reinstall the components that were removed for installation.

Thank you for your purchase.

For a list of more products we offer please visit marqcadeng.com or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.