


Product: Defender OEM Window Handle Adjustment Kit


Disclaimer: N/A

Instructions:

- Open your OEM window and remove the 2 screws on each side of the window handle mount.

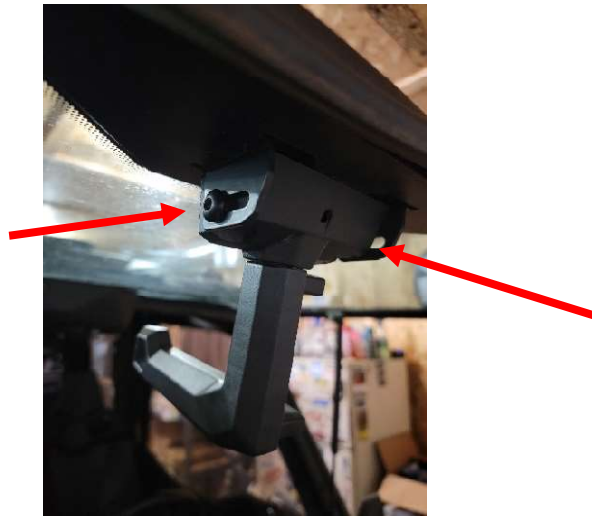

- Turn the handle so the roll pin is lined up with the hole in the bottom of the handle mount. Remove the roll pin from the handle, and remove the washer. (We found the best tool to pinch and remove roll pin is a side snips)

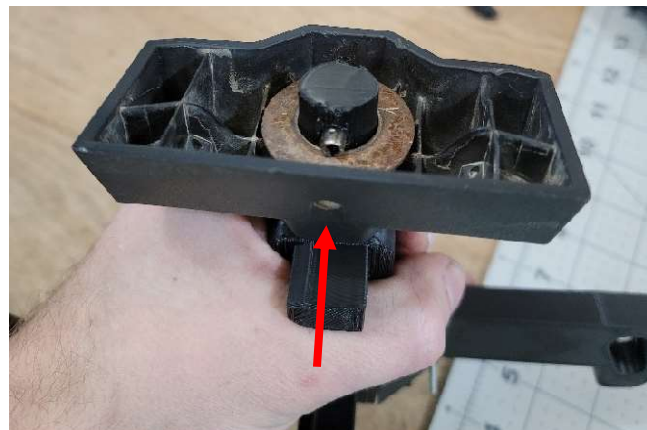

Thank you for your purchase.

For a list of more products we offer please visit [marqcadeng.com](http://marqcadeng.com) or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.

- Install one shim at a time then the washer until the washer is lined up as close to the hole as possible.



- Install the roll pin the same way as removal by lining up the holes. Check to be sure that the handle still spins somewhat freely. If it is too tight initially do not force it as this may cause the handle end to break. If this is the case you will need to remove one of the shims.



Thank you for your purchase.

For a list of more products we offer please visit [marqcadeng.com](http://marqcadeng.com) or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.

- Re-install the mount to the window, keep the bolts loose until the next step.



- Close the window and put the handle in the latched position. Push down with moderate pressure and tighten the mount bolts. Open and close the window to insure proper operation.



Thank you for your purchase.

For a list of more products we offer please visit [marqcadeng.com](http://marqcadeng.com) or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.