



Product: Can Am Defender Limited Front AC Line Guards

Disclaimer: N/A

Instructions:

- **Front Guard Installation**
 - Place the large oval shaped clamp around the lines so that the flat end is faced towards the wheel as shown below.




- Hold the guard up to the front side of the plastic as it would be mounting to protect the lines roughly lining it up with hole in the clamp. Mark the holes on the outside of the plastic, then drill 1/4" holes in the two locations marked. Be careful not to drill into the parts behind the plastic.



Thank you for your purchase.

For a list of more products we offer please visit marqcadeng.com or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.

- Place the guard behind the plastic for installation and then attach the 2 front 1/4" bolts (Smaller Ones) with locknuts. You can slightly pull the plastic out while tightening the bolts to make installation easier. Leave finger tight until all bolts are started.
- Once those have been installed then you can install the 5/16" bolt (Larger bolt) through the guard, with the washer on the outside, and through both sides of the clamp securing it with the lock nut. Then tighten up all the hardware.

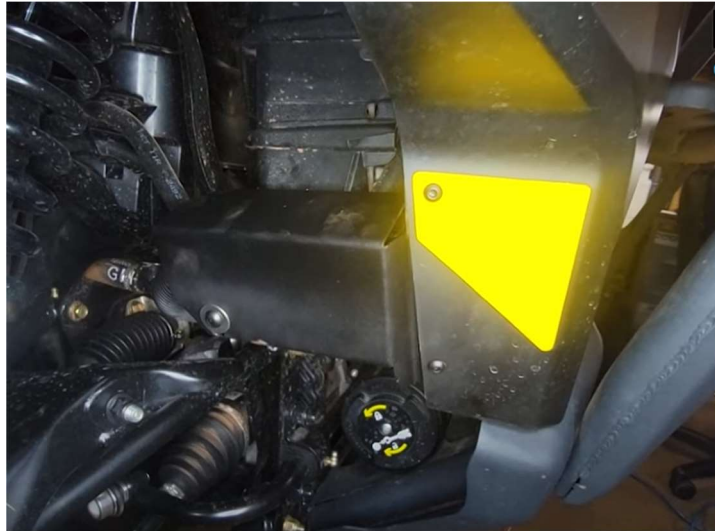

- **Rear Guard Installation**

- Install 2 round clamps around the round tube part of the frame with the flat sides facing towards the front of the machine.



Thank you for your purchase.

For a list of more products we offer please visit marqcadeng.com or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.

- Install the rear guard to the clamps using 2 of the 1/4" (shorter bolts) through the guard and then through both sides of the clamp and securing with the locknut. These need to be finger tight as it may make installation of the bolts easier if you slide the clamps and guard up the frame to get more access.



- Once in place slide the guard back down the frame into location so that the small plastic nub that sticks out of the fire wall lines up with the notch that is cutout in the guards flange. Once in Place the rotate the guard up against the fire wall and secure it using the 3 number 6 screws and washers. Then tighten up the bolts that clamp to the frame.



Thank you for your purchase.

For a list of more products we offer please visit marqcadeng.com or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.