


Product: Can-Am Defender Bed Divider Wood Board End

Disclaimer: N/A

Instructions:

- Cut your desired board type to 52.5" in length. Hold the plastic end up to the end of the board, thicker side goes against the board, and flat larger end is the top. Doing one hole at a time, drill a small pilot hole and then install your wood screw. The pilot hole will help ensure that the wood does not split when the screws are installed. Once each end is attached to the wood board then test fit and installation is done.

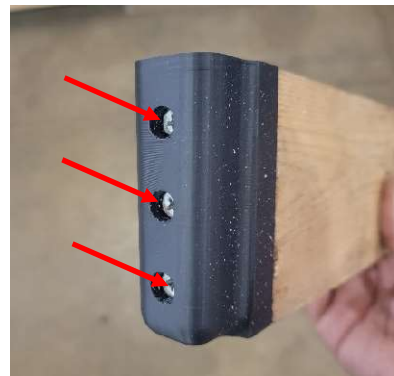

Thank you for your purchase.

For a list of more products we offer please visit marqcadeng.com or message us on facebook at marqCAD Engineering if you don't see what you are looking for on the website.